7 Print test label

Load 4" x 4" or larger labels .
Select the media type in the EWS Diagnostics page.

Printer Online
C Y M
K2   K1

(Config)

CONFIGURATION
2. MAINTENANCE   (Select)
↰ ▲ ▼ ↵

MAINTENANCE
1. PRINT TEST PAGE
↰   ↵

PRINT TEST PAGE
2. PQ PLOT
↰ ▲ ▼ ↵

Sample PQ plot

① ② ③ ④

The quick brown fox jumps over the lazy dog
ABCDEFGHIJKLMNOPQRSTUVWXYZ
abcdefghijklmnopqrstuvwxyz
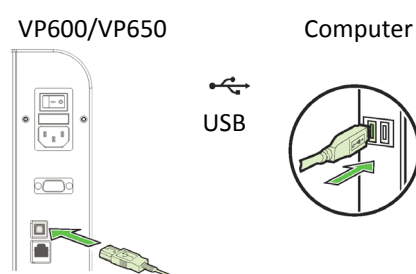0123456789
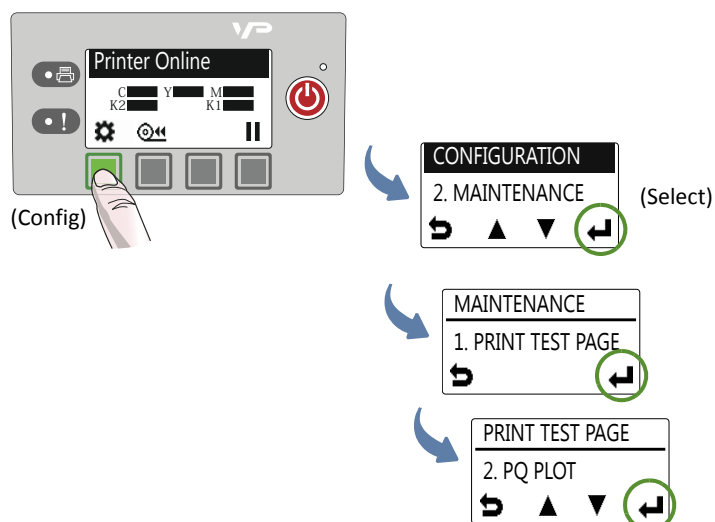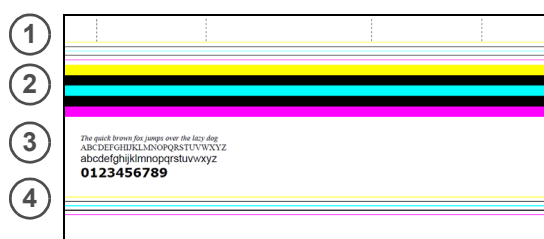
Verify the following on the PQ plot:

1 • Lines are printed in the order yellow, black, cyan, black and magenta.
   • Lines are clearly defined with no white dots or streaks.
   • Vertical dashed lines are straight.

2 • Bars are printed in the order yellow, black, cyan, black and magenta.
   • Bars are clearly defined with no white dots or streaks.
   • No color mixing in the bars.

3 • Text is sharp, crisp, and legible.

4 • Lines are printed in the order yellow, black, cyan, black and magenta.
   • Lines are clearly defined with no white dots or streaks.

8 Install printer driver
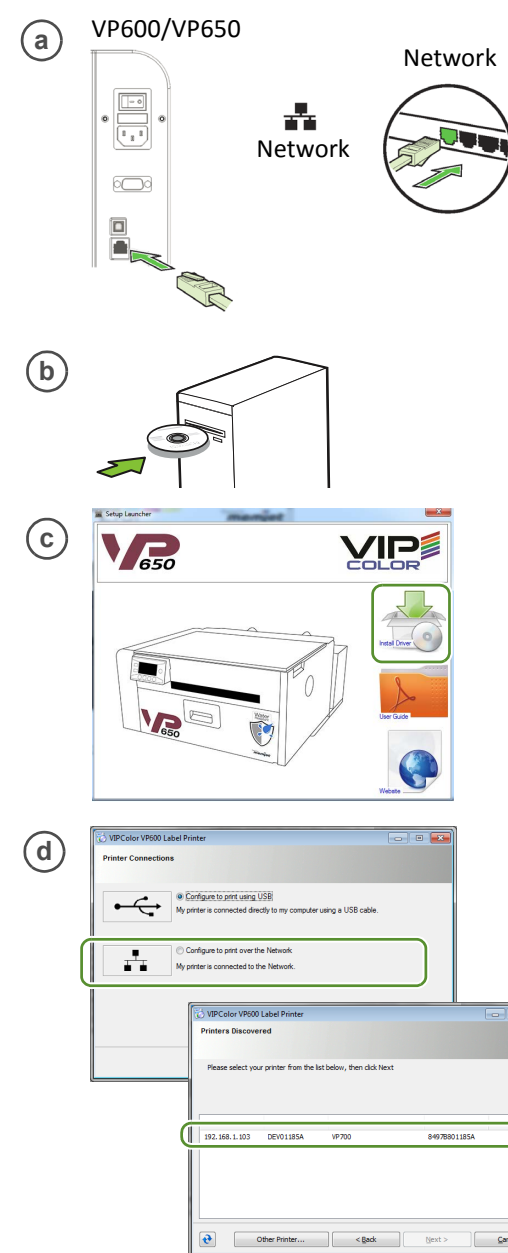
To connect printer to computer

ⓐ

ⓑ
VP650   VIP COLOR

ⓒ
VIPColor VP600 Label Printer
Printer Connections
⊙ Configure to print using USB
My printer is connected directly to my computer using a USB cable.
○ Configure to print over the Network
My printer is connected to the Network.
< Back   Next >   Cancel
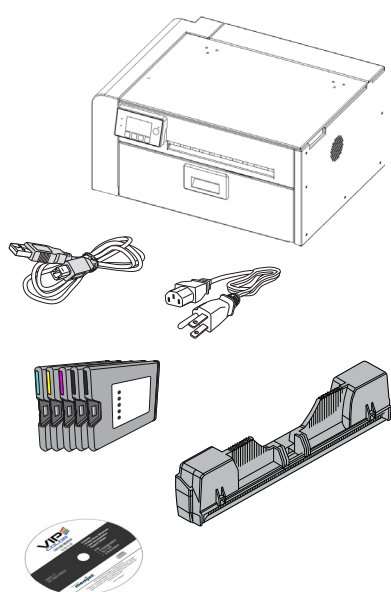
ⓓ Connect USB cable when prompted

VP600/VP650   Computer

USB

To connect printer to network

DHCP is enabled by default. If it is not available, see "Additional Networking Information".

ⓐ VP600/VP650   Network
                         Network

ⓑ

ⓒ
VP 650   VIP COLOR

ⓓ
VIPColor VP600 Label Printer
Printer Connections
○ Configure to print using USB
My printer is connected directly to my computer using a USB cable.
⊙ Configure to print over the Network
My printer is connected to the Network.

Printers Discovered
Please select your printer from the list below, then click Next
192.168.1.103   DEV0118SA   VP700   (H97B0118SA)
↻ Other Printer...   < Back   Next >   Cancel

© 2020 VIPColor Technologies
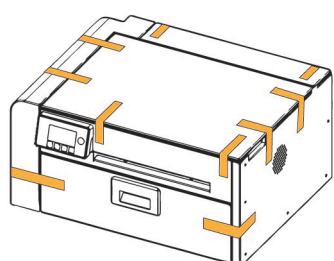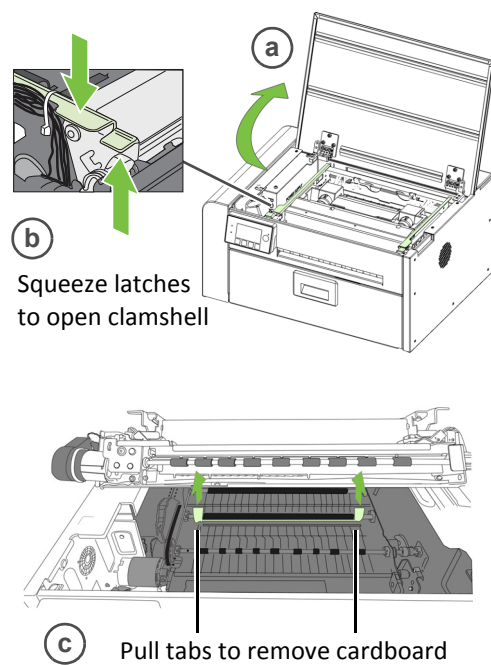VP650-80002   Edition 1

Start

NOTE: Please ask your reseller for the printer driver software.
Also check with your reseller about warranty registration.
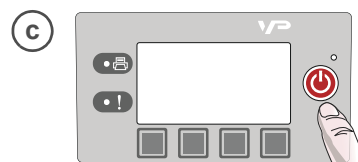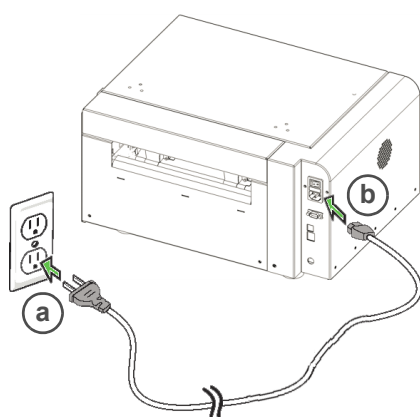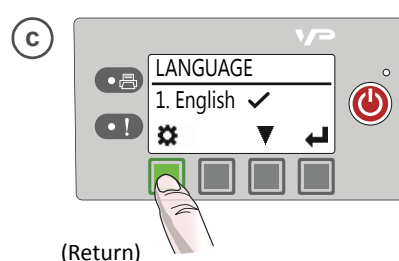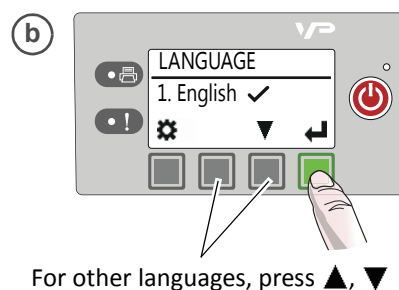
1 Remove tape & cardboard

Remove tapes

Remove cardboard

ⓐ

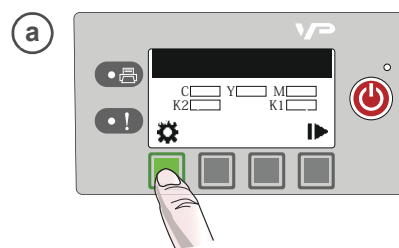ⓑ Squeeze latches to open clamshell

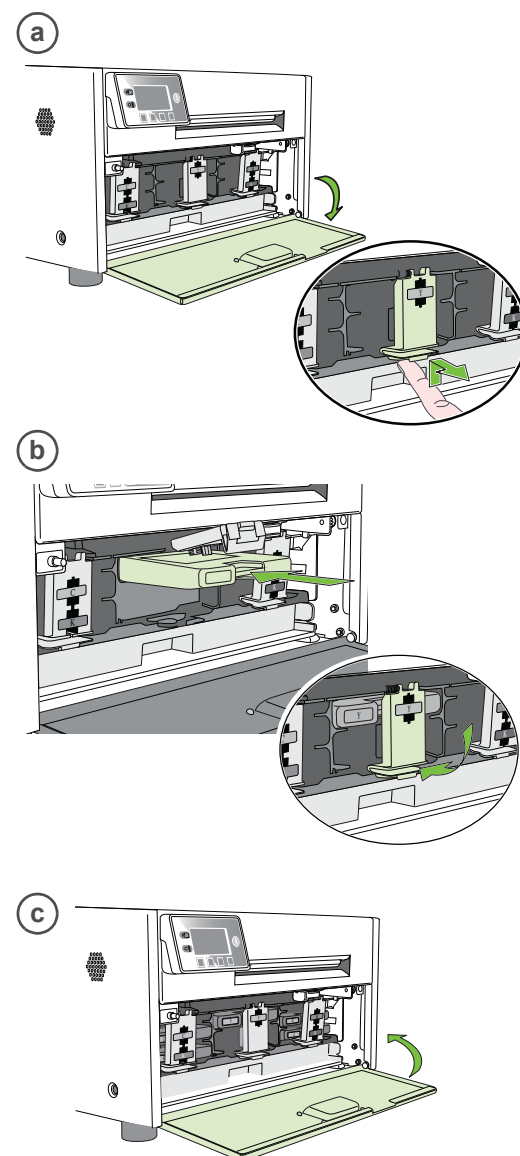ⓒ Pull tabs to remove cardboard

2 Connect power

ⓒ
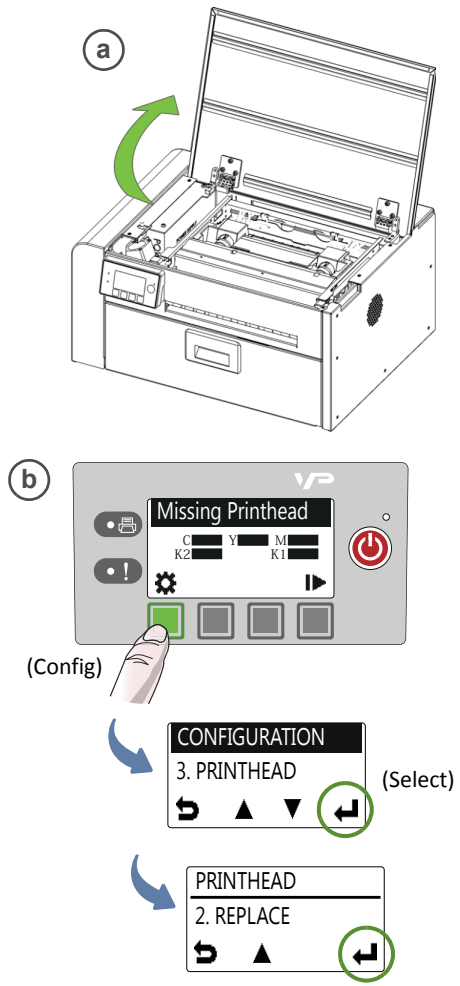

Choose display language

After connecting power for the first time, press Config to set the display language for the control panel.

ⓐ
C Y M
K2   K1

ⓑ
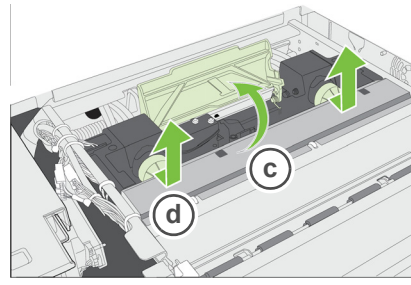LANGUAGE
1. English ✓
✿ ▼ ↵

For other languages, press ▲, ▼

ⓒ
LANGUAGE
1. English ✓
✿ ▼ ↵

(Return)

3 Install ink cartridges

ⓐ

ⓑ

ⓒ

4 Install printhead

a

b

Missing Printhead
C Y M
K2 K1

(Config)

CONFIGURATION
3. PRINTHEAD
↰ ▲ ▼ ↵ (Select)
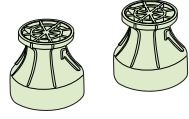
PRINTHEAD
2. REPLACE
↰ ▲ ↵

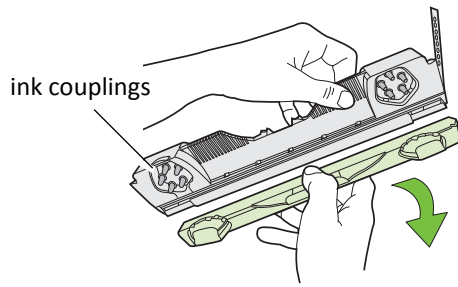⚠ Wait for printhead latch to be released. It will pop open. DO NOT force it open as it may break.
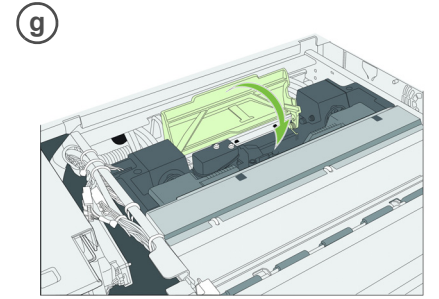
c Open printhead latch fully
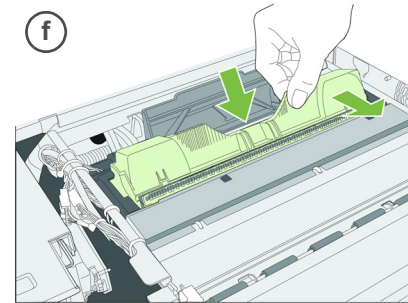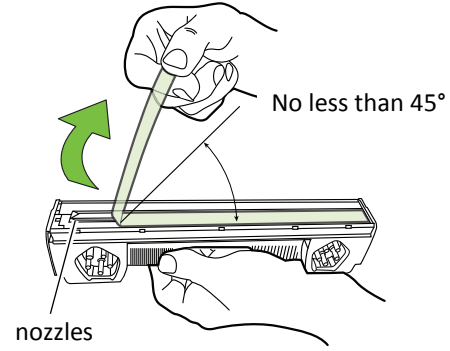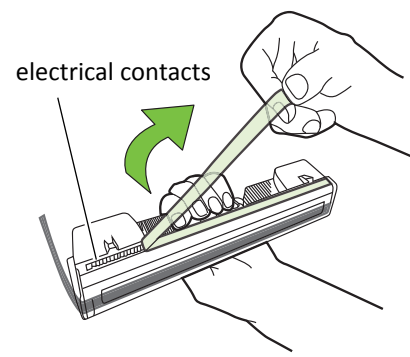
d Remove caps

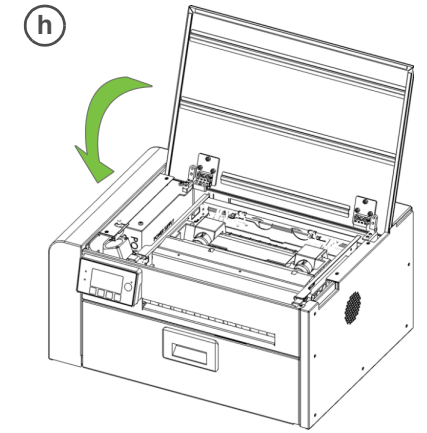**e** Remove printhead from packaging

ink couplings

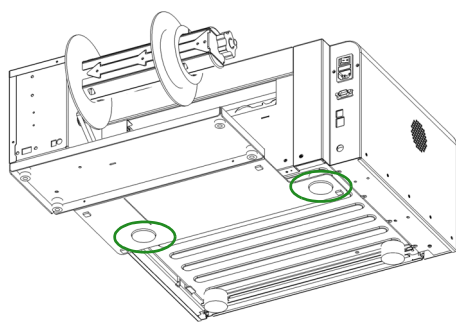**NOTE:** Keep the orange cover. You will need it to cap the printhead if it is removed from the printer.

⚠ Do not touch the ink couplings, electrical contacts, or nozzles.
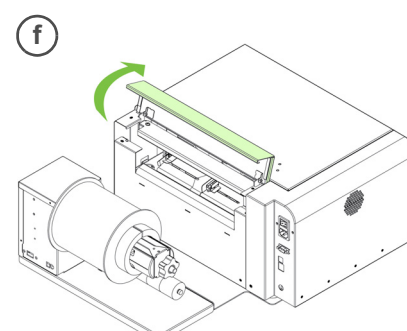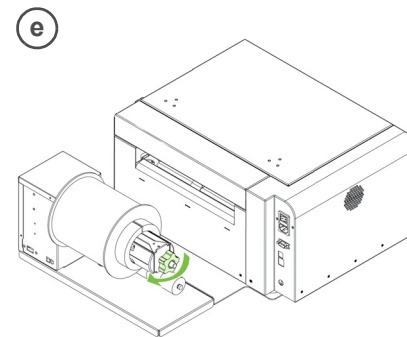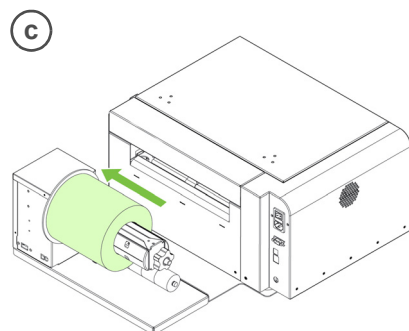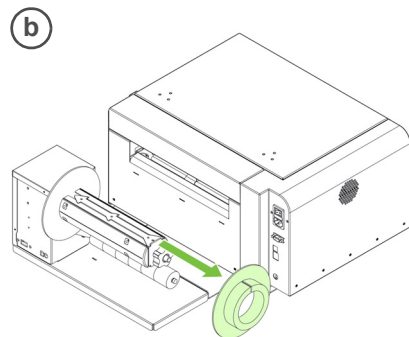
electrical contacts

No less than 45°

nozzles

f

g

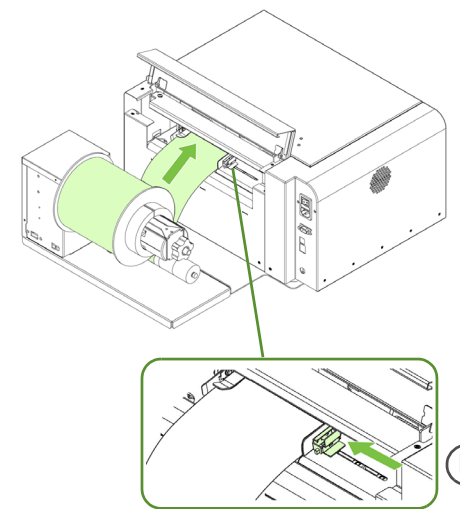Check that ink is flowing through the tubes on both sides of the printhead.

h

---

5 Install unwinder

Rear rubber feet of printer fit into holes on base of unwinder.

6 Load media

a

b

c

d

e

f

Slot
Flat side

✔ ✘

Slot

Curved side

Slot

g Insert media until it stops. Wait for printer to load media.

h

i